



NXU- II G
Surge Arrester

User Instruction

Safety Warning

- ❶ This product is strictly prohibited from being installed in an environment where there are flammable or explosive gases or moisture or condensation. It is strictly prohibited to operate the product with wet hands.
- ❷ It is strictly prohibited to touch the conductive parts of the product when it is in operation.
- ❸ Be sure to de-energize the line when installing and repairing the product.
- ❹ The product must be wired and installed by qualified personnel and be checked regularly.
- ❺ It is strictly prohibited for children to play with the product or packaging materials.
- ❻ Prevent foreign objects from falling into the products.
- ❼ Do not install the product in places where gaseous media can corrode metals and damage insulation.
- ❽ When the product is installed and used, the wiring screws should be tightened, the wires should not be easy to loosen or pull out. The wires and the external disconnecter should be selected in strict accordance with the requirements.
- ❾ When the indication window changes from green to red, please replace the product in time.

1 Purpose of Use

The NXU-IIG surge arrester is suitable for single-phase/three-phase power distribution and control systems with a frequency of 50Hz/60Hz and a rated voltage of 230V/400V. It meets the level II SPD test and is used to suppress transient overvoltage lower than the equipment withstand overvoltage and discharge surge energy to protect system circuits and equipment. Main features of the surge arrester: With the L-PE, N-PE and L-N protection modes, it is suitable for various power grid systems; with aging overheating protection and body degradation indication, it has a plug-in structure and the optional remote alarm function.

2 Key Technical Parameters



Table 1 Key Technical Parameters

No.	Maximum discharge current I_{max} (8/20 μ s)kA	Maximum continuous working voltage U_c V~	Voltage protection level U_p kV	Nominal discharge current I_n (8/20 μ s)kA	External disconnector
1	40	275	1.5	20	Fuse 125A gL/gG
		320	1.6		
		385	1.8		
		440	2.0		
2	65	255 ^a	1.5	30	Fuse 160A gL/gG
		275	1.6		
		320	1.8		
		385	2.0		
		440	2.2		



a: I_{max} is applicable for the 1P+N and 3P+N specification of 65 kA and 40 kA. The I_{max} is 65 kA for N-PE pole, 255 V for U_c , 1.5 kV for U_p , and 30kA for I_n

3 Installation

1. Outline and installation dimensions

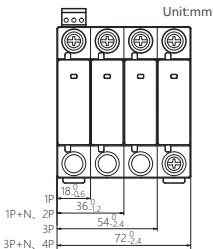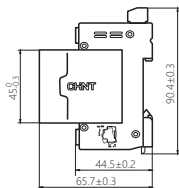


NXU-II G/F

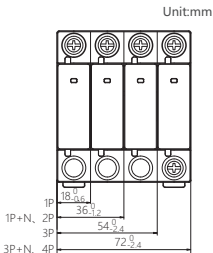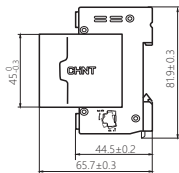


NXU-II G


2. On-off indication

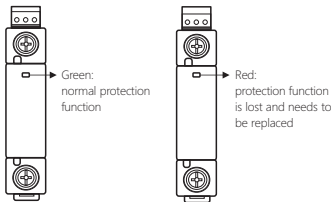


3. Installation

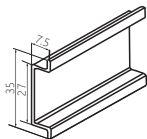

TH35-7.5 type mounting rail

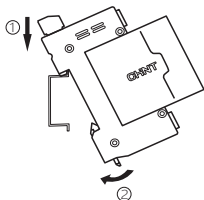


4. Disassembly

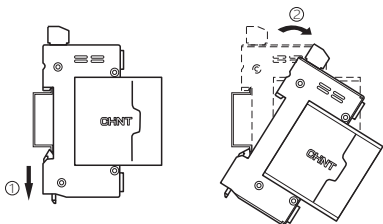

5. Wiring: copper wires only

Table 2 Copper wire cross-sectional area

Specification	Copper wire cross-sectional area (mm ²)
L and N incoming lines of 40 kA	4
L and N incoming lines for 65 kA	6
Ground line of 40 kA	6
Ground line of 65kA	10

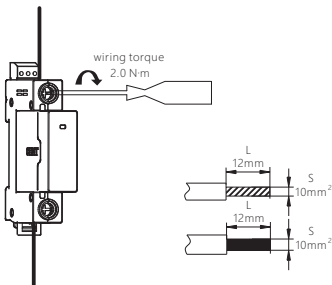

4 Maintenance

- Regularly check whether the surrounding environment meets the normal operating conditions of the surge arrester;
- If the degradation indication window of the surge arrester protection module has turned red, it means that the product has degraded and should be replaced in time;

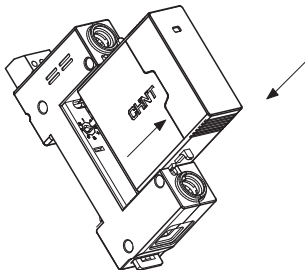


Table 3 Analysis and Troubleshooting of Common Faults

Symptoms	Cause analysis	Troubleshooting method
Not protective	Unreliable ground, or large ground impedance	Ground reliably, or reduce the ground impedance
	The working voltage of the surge arrester does not match the equipment being protected	Replace the product
	The surge arrester is too far away from the equipment being protected	Add a surge arrester within 30 m, or shorten the distance
	Wiring is not tightened or loosens, resulting no power supply	Strip and tighten screws as required

6 Environmental Protection

In order to protect the environment, the product or product parts should be disposed of according to the industrial waste treatment process, or be sent to the recycling station for assortment, dismantling and recycling.

CHINT

QC PASS

NXU- II G
Surge Arrester
IEC/EN 61643-11

Check 51

Test date: Please see The packing

ZHEJIANG CHINT ELECTRICS CO.,LTD.

CHNT

CHINT ELECTRICS

NXU- II G
Surge Arrester
User Instruction

Zhejiang Chint Electrics Co., Ltd.

Add: No.1, CHINT Road, CHINT Industrial Zone, North Baixiang,
Yueqing, Zhejiang 325603, P.R.China

E-mail: global-sales@chint.com

Website: <http://en.chint.com>

